


Most common mistakes


1

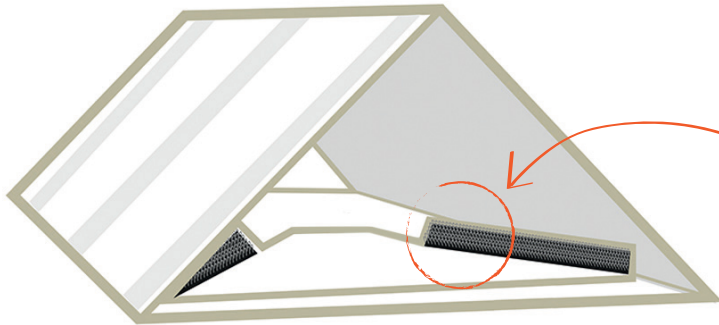

FRONT DOOR

When the door is lying flat inside the Pod the velcro should be facing **UPWARDS**.


2

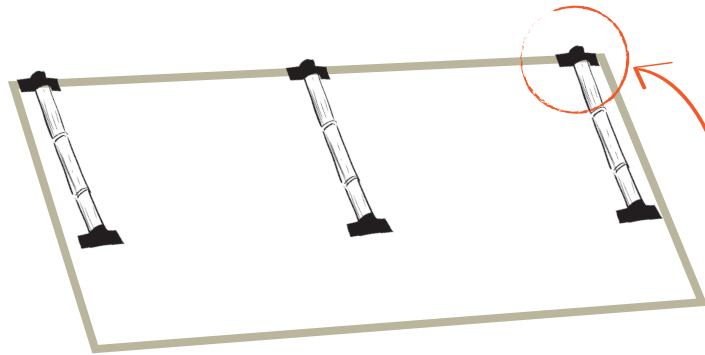

BAMBOO STRUCTURE

Bamboo must be fixed to the very **TOP** edge of the Pod.

3

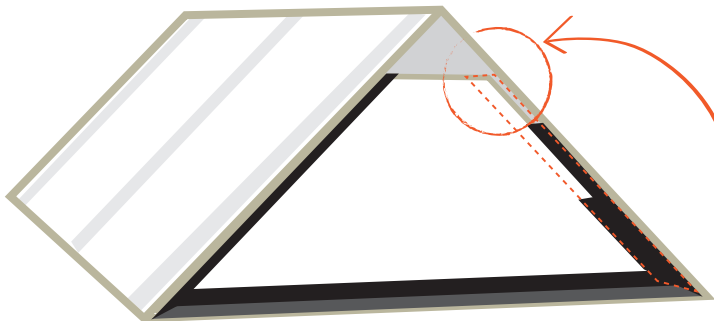

BACK PANEL

Tape back panel 5cm from the edge of the Pod.

Further points

- **PLEASE, PLEASE** rub the gaffer tape repeatedly to warm it and enable it to stick
- Please ensure **ALL** the tape on the inside of the Pod is aluminium foil tape (silver)
- Please ensure **ALL** the tape on the outside of the Pod is gaffer tape (black)
- Remember the top edge will have aluminium tape on the inside.
- Please recess the front door 2cm in from the edge
- Please recess the back panel 5cm in from the edge
- Please pay close attention to the video in order to make the best possible Pod

Remember, someone will be sleeping in it outside.